


## **HOME**


**QUALITY HARDWARE** 

## **BALL BEARING STRAP HINGE**

## **Installation Tips**

- 1. Position hinge butt on post and hinge strap on gate rail and mark centres for screw holes.
- 2. Ensure that hinge is at a right angle.
- 3. Drill 5.5mm pilot holes for screws to ensure a neat and secure job.
- 4. Fix hinge butt to post and hinge strap to rail.
- 5. After installation the hinges must be lubricated. Pack barrel with petroleum jelly or grease/
- 6. Oil Regularly when in use.

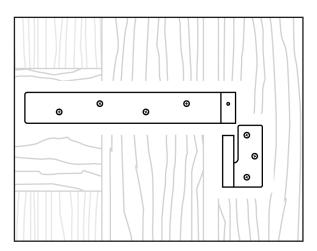

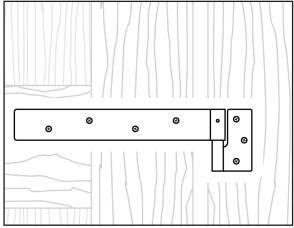

Distributed by
Fox & Gunn Limited
Auckland, New Zealand
Designed for exterior use