

HOME

QUALITY HARDWARE

GATE SPRING

Installation Tips

1. Gate spring must be mounted on the hinge side of the gate with the upper mount tilted to the LEFT and with the moveable hex head on top.
2. Fit spring from gate to post as shown.
3. Mark hole positions, drill pilot holes using 2.5mm drill.

